

6. Date and time setting (for Windows computer)

1. Right-click on Windows desktop. Choose Notepad to create a *.txt (text) file. Then double-click the text file.
2. Suppose current time is October 16, 2011 15:00. Enter date and time information as **2011.10.16 15:00:00** Note that a space must be present in between date and hour and time is in 24-hour format.
3. Name the file as **settime.txt** and save it to the root directory of the memory card.
4. Insert the memory card to the slot then power on the device. The date and time setting is now completed.
5. Please note when the date and time information is successful set to the device the settime.txt file should not be visible when you connect the device to the computer again.

7. Operation


※ Please note, memory card needs to be formatted on the device for the unit to recognize it. Formating memory cards over PC is highly not recommended and may result in recording failure.

1. Format the memory card

- 1.1 Insert the memory card to the device then press ③ once to power on the device.
- 1.2 Press and hold the ④ first, then press the ⑤ button.
- 1.3 Release ④ and ⑤ at the same time. The red and blue LED will turn off simultaneously with vibration. Please note all LED should be turned off when memory card format is completed.
2. Basic operation
- 2.1 Power on: Press ③ once and blue LED will illuminate.
- 2.2 ⑫ Vibration On/Off, ⑬ Resolution HD/VGA.
- 2.3 Record video: Press ③ again and red LED will illuminate.
- 2.4 Stop recording: Press ③ again and red record LED will turn off.
- 2.5 Take photos: Press ⑤ once and red LED will blink.
- 2.6 Power off: Press ④ once to turn off the device.

The blue indicator will turn off.

PROFESSIONAL GRADE HD 720P WIDE DYNAMIC RANGE KEYCHAIN HIDDEN CAMERA

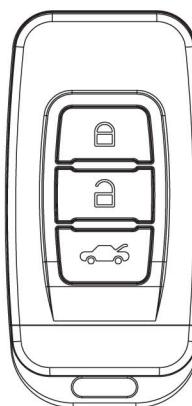


QUICK START GUIDE

V1.1


AVAILABLE AT
WWW.SPYGEARGADGETS.COM

1. Names and parts

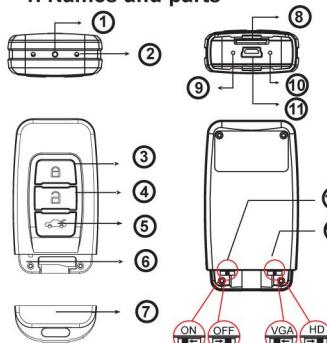

1. 5MP Camera
2. Microphone
3. Power on/Record
4. Power off
5. Photo
6. Reset
7. Covert Cap
8. Memory Card Slot
9. Power/Rec/Photo LED
10. Charge LED
11. USB Port
12. Vibration Switch
13. Resolution Switch

 2. Package Content



DC 5V charger



MicroSD card




Charging cable



USB cable

3. Charge the battery

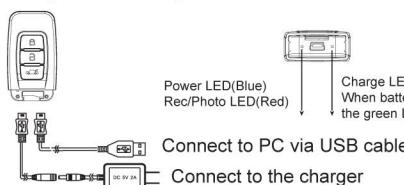

Power LED(Blue)
Rec/Photo LED(Red)
Charge LED(Green)
When battery is fully charged, the green LED will turn off.

1. Remove the rear covert cap and connect the supplied USB cable into the device.
2. Plug the USB cable to a PC, the green charge LED at the rear of the device will illuminate to tell you it's charging.
3. You can also charge the device by the supplied charger. Plug the charger to a wall outlet, connect the charger to the device. The green charge LED will illuminate to tell you it's charging and will turn off when the battery is full.

4. Download videos and photos from DVR

1. Video and photo files are stored in the memory card.
2. There are two ways to download video/photo files.
 - 1.1 Using memory card reader to download video/photo files.
 - 1.2 With the device powered on and memory card inserted, connect the device to PC by USB connection. It will be recognized by PC as an external drive for user to download the video recordings and photo files.

5. Using PV-RC200HD as a webcam

1. Remove memory card from the device, connect to PC by USB cable then power on the device.
2. PC detects the device as a webcam and installs it automatically, no driver is needed for installation.(For XP,Vista & Windows 7)
3. Installation completed, webcam is ready for function.